

MARTIN LINGE A & Askepott




Contact Information

Call sign:	LF8M	E-mail:	GM_mlakontrollrom@equinor.com
MMSI no:	257 354 000	Phone no:	+47 57 75 51 11
Position datum WGS 84	60°30′20,47″	VHF central control	16, 72
North, dms:		room:	
Position datum WGS 84 East,	2°0′44,89″	UHF central control	NA
dms:		room:	
Contact Information cranes			

UHF crane 1	96	UHF crane 3	
UHF crane 2	97	UHF crane 4	

Map with zones (not to scale) - see ARIS R-32669 for operations within exclusion zones

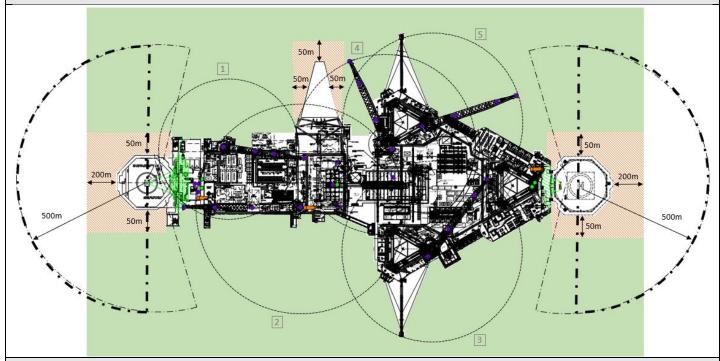

Zone color coding

Color	Meaning	Reason
Green zone:	Loading/offloading zone.	
	Normal process with	
	approval from the Central	
	Control room	
Orange-striped	Caution zone. Entering this	East and west zones: Risk of collision with lifeboat/living quarter
zone:	zone needs extra approval	structure.
	from Platform Manager in	
	addition to Central Control	Below flare boom: risk of falling objects, high temperatures, and
	room	hot particles from flaring. The flare line could also be exposed to
		collision.
Red/Yellow	Exclusion zone. Entering	NA
zone:	this zone needs approved	
	dispensation.	

Other symbols/markings		
	180-degree obstacle free helicopter zone 210-degree obstacle free helicopter zone	
Platform specific information		
Largest allowed vessel displacement without NMO:	8000 t	
Lowest height from MSL to living quarter or lifeboats:	27.5 m	
Lowest bridge height from MSL:	27.5 m	

Displacement / Significant wave height - table for vessel operation on weather side of platform

E = 17,6 MJ		
Displacement	Significant wave	
[ton]	height [m]	
5000	4,5	
6000	4,1	
7000	3,8	
8000	3,5	
9000	3,3	
10000	3,2	
11000	3,0	
12000	2,9	
13000	2,8	

For vessIs above 13000t, the risk must be evaluated. The platform manager shall be contacted.



Additional information

NB! Operatonal criterias in place based on collision risk assessment:

- Approach from 500m to 200m (DP set-up) must be performed in a drift-off sector. Auto-pilot <u>not</u> to be used.
- Move-in on DP must be performed with vessel side towards installations from 200m 20m.
- Crane operations at MLA to be performed with stern towards Askepott. The bow is never allowed to point towards either installation.
- Repositioning between Martin Linge and Askepott must be performed at > 200m separation

Askepott contact/crane info: See own «Vedlegg A» under "flyttbare innretninger".

Owner: Marine Technology Department Equinor		
Rev. No	Date	Name
0	23.01.2020	inand
1	14.09.2020	moksh
2	24.09.2021	inand
3	08.08.2023	inand
4	25.09.2024	inand