
Heidrun B



Contact Information

Call sign:	LCXA	E-mail:	gm_hdbcr@equinor.com	
MMSI no:		Phone no:	+47 748 62 712	
Position datum WGS 84 North, dms:	65°20'36.11"	VHF central control room:	9	
Position datum WGS 84 East, dms:	7°21'50.73"	UHF central control room:		
Contact Information cranes				
UHF crane 1		UHF crane 3	na	
UHF crane 2	na	UHF crane 4	na	
Man with zones (not to scale)				

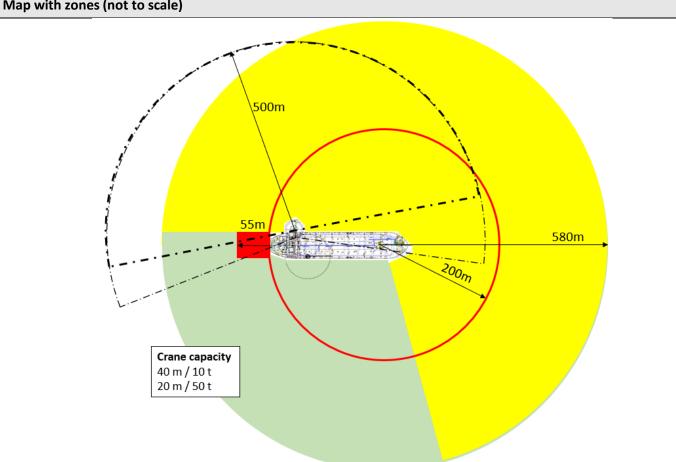

Zone color coding				
Color	Meaning	Reason		
Green zone:	Loading/offloading zone. Normal process with approval from the Central Control room	Crane coverage		
Orange-striped zone:	Caution zone. Entering this zone needs extra approval from Platform Manager in addition to Central Control room			
Red/Yellow zone:	Exclusion zone. Entering this zone needs approved dispensation.	Bow: Risk of drift on collision. Weather from this direction. Stern: Risk of bow to stern collision due to heading. Also: Vessel operations in these areas should normally not be necessary		

Other symbols/n	narkings			
18 Cr Cr ci		 180-degree obstacle free helicopter zone 210-degree obstacle free helicopter zone CAUTION: Turning radius. Platform is weathervaning and rotates within this circle. Sudden heading change could occur! See additional information for risks within this circle. 		
Platform specific	information			
Largest allowed v		8000t		
displacement without NMO:				
Lowest height fro	-	na		
quarter or lifeboats: Lowest bridge height from MSL:		na		
_	-	th -table for vessel operation on weather side of platform		
-				
E	= 22 MJ			
Displaceme	nt Significant wave height			
[ton]	[m]	Ţ		
5000	5.0	A LEWISTIC		
6000	4.6			
7000	4.2			
8000	4.0			
9000	3.7	HEIDRUN B		
10000	3.5			
11000	3.4			
12000	3.2			
13000	3.1			
For vessels	above 13000t, the			
risk must be evaluated. The				
platform's maritime leader				
Additional inform	nation			
WARNING, Platfo	orm is weathervaning	and has heading control. Sudden heading changes could occur:		
Zones ma	arked on the map			
	vith the platform	Equinor FPSO & FSU		
heading.	of risk of collision if	PSV operation illustration		
	ading control when			
	s inside the turning	Equinor FPSO & FSU Safety zone, NOT TO SCALE		
radius.				
	equence of a ship	Equinor FSU or FPSO		
	with the platform	PSV cargo operating area		
	d be severe. Visiting side the turning	PSV-Speedless than 1 th 3 3 3 3 3 4 5 5 5 5 5 5 5 5 5 5 5 5 5 5		
	ust therefore use the			
-	approach and keep	PSV Safety zone		
the heading paralell to		entering area		
platform	at all times:			
Owner: Marine Technology Department Equinor				
	Date	Name		
1	04.03.2020	moksh		
2	03.09.2020	inand		